



**File Name:** canon hfs11 manual.pdf  
**Size:** 3351 KB  
**Type:** PDF, ePub, eBook  
**Category:** Book  
**Uploaded:** 1 May 2019, 19:31 PM  
**Rating:** 4.6/5 from 795 votes.

**Status:** AVAILABLE

Last checked: 14 Minutes ago!

**In order to read or download canon hfs11 manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

- [Register a free 1 month Trial Account.](#)
- [Download as many books as you like \(Personal use\)](#)
- [Cancel the membership at any time if not satisfied.](#)
- [Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon hfs11 manual . To get started finding canon hfs11 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# canon hfs11 manual

The Mains plug shall remain readily operable to disconnect the plug in case of an accident. Use only the same type of batteries. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. The product may fall, causing serious injury to a child or adult, and serious damage to the product. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. Unauthorized substitutions may result in fire, electric shock or other hazards. Receive information on new products and promotions Upon your request, we will send you information on Canon new products and promotions. More than twice the number of scanning lines. "Full HD 1080" refers to Canon camcorders compliant with highdefinition video composed of 1,080 vertical pixels scanning lines. Video is recorded at this resolution only when the recording mode is set to MXP or FXP mode. Recording on flash memory means that there are no moving parts in the recorder unit of the camcorder. To you, it means a camcorder that is smaller, lighter and faster. Please read this manual carefully before you use the camcorder and retain it for future reference. Should your camcorder fail to operate correctly, refer to Troubleshooting 151. The countdown appears on the screen. INFO button CUSTOM dial CUSTOM button Memory card slot cover Memory card slot . Remove the battery pack to find it. Getting Started Charging the Battery Pack The camcorder can be powered with a battery pack or directly using the compact power adapter. Please call 18008BATTERY for information on how to recycle this battery. Accessories Fasten the grip belt. Rotating the LCD panel 180 degrees can be useful in the following cases To include yourself in the picture when recording with the self timer. Push the joystick up, down, left or right to select an item or change settings. <http://www.easyarea.com/admin/images/hymer-b564-manual.xml>

- **canon hf s11 manual, canon legria hfs11 manual, canon vixia hf s11 manual, canon hfs11 manual, canon fs11 manual, canon hfs11 manual pdf, canon hfs11 manual download, canon hfs11 manual free, canon hfs11 manual downloads, canon hf11 manual, canon hf r11 manual.**

If the joystick guide does not appear on the screen, press the joystick on the operating mode. Menu Following is an example of selecting a FUNC. You can set it to one of 22 other languages. Refer to the table below. Basic Recording Shooting Video Operating modes 1 Set the camera mode dial to 2 Turn on the camcorder. By default, movies are recorded in the builtin memory. Memory card 8 GB 40 min. Memory card 16 GB 1 hr. 25 min. Memory card 32 GB 2 hr. 55 min. Move it toward T telephoto to zoom in. By default, the index screen will show up to 6 items scenes or photos. Move the zoom lever toward W to show up to 15 items per screen. Move it toward T to return to the default index screen display. The orange selection frame will appear on the first scene recorded on the selected date. This function is not available from the index screen for video snapshot scenes. 1 Open the movie index screen. You can select the original movies in the builtin memory or on the memory card. The large thumbnail will show the first frame of the scene. Timeline ruler Page sidebar Frame selected for start of playback. Stabilize the camcorder, for example, by mounting it on a tripod. Attach the optional video light to the mini advanced shoe. Use the supplied software Music Transfer Utility to transfer music files from the supplied Music Data CDROM to the camcorder. Manual Exposure Adjustment and Automatic Backlight Correction At times, backlit subjects may appear too dark underexposed or subjects under very strong lights may appear too bright or glaring overexposed. To correct this, you can manually adjust the exposure or use the automatic backlight correction. Typical examples include Faces extremely small, large, dark or bright in relation to the overall

picture. Activate the selected fader while recording pause the recording. To activate an effect mode Activate the selected effect while recording or in record pause mode. <http://www.techbis.pl/files/hymer-b534-owners-manual.xml>

For details about optional accessories available for use with your camcorder, refer to Accessories 174. For details about using the microphone, refer to the instruction manual of the DM100. Using other microphones You can also use commercially available microphones. Connect the external microphone to the MIC terminal. Use commercially available condenser microphones with their own power supply. Operating modes 1 Open the original movies index screen. You can select the original movies in the builtin memory or on the memory card. Basic Recording Taking Photos Operating modes 1 Set the camera mode dial to 2 Turn on the camcorder. By default, photos are recorded in the builtin memory. In such case, use the optional 58 mm ND4L filter. Selecting Photo Size and Quality Photos are recorded as JPG files. Push the joystick down to run quickly through the photos. Photo Jump Function When you have recorded a large number of photos, you can jump 10 or 100 photos at a time. 1 Open the joystick guide. Attach the optional VFL2 Video Flash Light to the mini advanced shoe. Taking Photos while Recording Movies Simultaneous Recording You can record photos even while the camcorder is set to Moreover, you can capture the photo at the same time you are recording video. Histogram Display In single photo view, you can display the histogram and the icons of all the functions used at the time of recording. To capture the photos 1 Play back the scene containing the picture you want to capture. 2 Pause the playback at the point you want to capture. Press again to remove the protection. 4 Repeat steps 23 to protect additional photos or press twice to close the menu. Failing to do so may result in permanent data loss. Do not open the memory card slot cover. Do not disconnect the power source or turn off the camcorder. Do not change the camcorder's operating mode. Trimming settings apply to one photo only. Operating modes 1 Open the print settings menu.

Later, you can easily print out the print orders by connecting the camcorder to a PictBridge compatible printer 109. Refer to 55. Printing cannot be restarted when the print order settings have been changed or if you deleted a photo with print order settings. Type Digital Quality High definition Output only Connection Connect to a highdefinition TV HDTV with an HDMI input terminal. Playback on an HDTV using one of the highdefinition connections will ensure the best playback quality. Operating modes 1 Turn off the camcorder and the TV. 2 Connect the camcorder to the TV. Because space is limited, make sure to save your recordings on a computer on a regular basis. PIXELA ImageMixer 3 SE With the software supplied on the Transfer Utilities CDRom you can save scenes to your computers hard disk. Authoring HighDefinition AVCHD Discs and Photo DVDs You can connect the camcorder to the optional DW100 DVD Burner to create highdefinition DVD discs AVCHD specifications. This way, you can save your video recordings in the highest video quality available. Creating DVDs. Refer to DW100 2 Connect the camcorder to the DVD Burner using the supplied USB cable. Appendix Menu Options Lists Menu items not available appear grayed out. For details about how to select an item, refer to Using the Menus function, see the reference page. Using this frame rate will give your recordings a cinematic look. You can select the degree of compensation. When the microphone attenuator is activated, screen. Consult your dealer or a Canon Service Center if the problem persists. If the camcorder becomes unusually hot or it becomes hot after using it only for a short while, it may indicate a problem with the camcorder. Consult a Canon Service Center. Replace the memory card or delete some recordings free some space on the memory card. Consult a Canon Service Center. 74 is activated. Also, photos cannot be recorded at 76 is activated. Consult a Canon Service Center.

Set Memory Card and Accessories Cannot insert the memory card. The memory card was not facing the correct direction. Turn the memory card over and insert it. The camcorder is connected using the optional HTC100 HDMI Cable, but HDMICEC does not work cannot play back using the TVs

remote control. Continue using this battery pack You attached a battery pack that is not recommended by Canon for use with this camcorder. If you are using a battery pack recommended by Canon for use with this camcorder, there may be a problem with the camcorder or battery pack. Cannot play back Check the memory card There is a problem with the memory card. Cannot play the movies in the builtin memory Initialize only using the camcorder The camcorders builtin memory was initialized using a computer. The camcorder cannot record or display the image. You inserted a MultiMedia Card MMC into the camcorder. Data may be recovered if the memory card has not been removed. Attempt recovering the data This message will appear the next time you turn on the camcorder if power supply was accidentally interrupted while the camcorder was writing on the memory card. No photos There are no photos to play back. Not available in Dual Shot You pressed a button that cannot be used in to set the camcorder to flexible recording mode. Turn the camcorder off, then on again. The lens cover did not open fully. Turn the camcorder off, then on again. If this does not solve the problem, consult a Canon Service Center. This. Check the disc. During disc recording mode, this message can appear when a commercially available DVD disc a DVD disc containing movies, software, etc. or an 8 cm mini DVD disc is inserted. During disc playback mode, this message can appear when a commercially available DVD disc or a brand new DVD disc is inserted. Consult a Canon Service Center refer to the list included with the printer to replace the ink absorber. Ink error An empty ink cartridge is installed.

Printer error A malfunction has occurred that may require repairs. Canon PIXMA printers the printers green power lamp and orange error lamp flash alternately. Disconnect the USB cable and turn off the printer. Unplug the printers power cord from the power outlet and contact the appropriate customer support center or service center. This will protect your important recordings in case of damage and create more free space on the memory. Be careful when closing the LCD panel. Excessive camcorder movement while shooting and extensive use of fast zooms and panning can result in jittery scenes. In extreme cases, the playback of such scenes may result in visually induced motion sickness. If you experience such a reaction, immediately stop the playback and take a rest break as necessary. To writeprotect the memory card set the switch to the LOCK position. Disposal When you delete movies or initialize the memory, only the file allocation table is altered and stored data is not physically erased. Consult a Canon Service Center for information on plug adapters for overseas use. This product is designed to achieve excellent performance when used with genuine Canon accessories. It plugs directly into a power outlet without a cable. Charging Times The charging times given in the following table are approximate and vary according to charging conditions and initial charge of the battery pack. TLH58 Teleconverter This Teleconverter lens increases the focal length of the camcorder lens by a. SC2000 Soft Carrying Case A handy camcorder bag with padded compartments and plenty of space for accessories. DM100 Directional Stereo Microphone This highly sensitive, superdirectional microphone attaches to the camcorder's. This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon brand accessories or products bearing the same mark. Exif Print is a standard for enhancing the communication between camcorders and printers.

By connecting to an Exif Print compliant printer, the camcorder's image data at the time of shooting is used and optimized, yielding extremely high quality prints. Note Please use Adobe Reader 6.0 or later to browse this PDF file. You may download and use the Content solely for your personal, noncommercial use and at your own risks. Canon shall not be held liable for any damages whatsoever in connection with the Content, including, without limitation, indirect, consequential, exemplary or incidental damages. You shall also not and shall not let others reproduce, modify, reformat or create derivative works from the Content, in whole or in part. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file. Access your account, or create a new account, click here to get started. Also, movie

recording requires cards with 128MB of memory or more. Cards made by Toshiba, SanDisk or Matsushita are recommended. No particular restrictions apply for still images. The driver may be included in your OS or you may not need a driver. Recommended Drivers File Name Date File Size  
Optional Drivers File Name Date File Size Recommended Software File Name Date File Size  
Optional Software File Name Date File Size Recommended Manuals File Name Date File Size  
Optional Manuals File Name Date File Size This limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase. The Equipment is warranted under normal, noncommercial, personal use, against defective materials or workmanship as follows Parts Defective parts will be exchanged for new parts or comparable rebuilt parts for a period of ONE YEAR from the date of original purchase, except for a defective Video Head, which will be exchanged for a period of three months from the date of purchase.

Labor For a period of ONE YEAR from the date of original purchase, labor will be provided free of charge by our factory service centers or designated service facilities located in the United States. When returning Equipment under this warranty, you must prepay the shipping charges, and you must enclose the Bill of Sale or other proof of purchase with a complete explanation of the problem. During the ONEYEAR warranty period, repairs will be made and the Equipment will be returnshipped to you free of charge. For repairs after the warranty period is over, you will be given an estimate of the cost of repair and an opportunity to approve or disapprove of the repair expense before it is incurred. If you approve, repairs will be made and the Equipment will be returnshipped to you. shipping charges apply. If you disapprove, we will returnship the equipment at no charge to you. Canon brand peripheral equipment and software which may be distributed with, or factory loaded on, the Equipment, are sold AS IS without warranty of any kind by Canon USA, including any implied warranty regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such nonCanon brand items is given by the manufacturer or producer thereof. If the Equipment contains a hard disk drive, Canon USA recommends that data stored on that drive be duplicated or backed up to prevent its loss in the event of failure or other malfunction of such drive. Canon USA shall have no responsibility under this limited warranty for use of the Equipment in conjunction with incompatible peripheral equipment and incompatible software. In order to obtain warranty service, contact the authorized Canon retail dealer from whom you purchased the Equipment or call the CANON INFORMATION CENTER AT 1 — 800OKCANON. You will be directed to the nearest service facility for your Equipment.

This Limited Warranty covers all defects encountered in normal use of the Equipment and does not apply in the following cases Loss or damage to the Equipment due to abuse, mishandling, accident, improper maintenance, or failure to follow operating instructions; If the Equipment is defective as a result of leaking batteries, sand, dirt or water damage; If defects or damages are caused by the use of unauthorized parts or by service other than by Canon USAs factory service centers or authorized service facilities; This Limited Warranty does not cover cabinet exterior finish, video cassette tape, head cleanings, nor does it apply to Equipment purchased outside the United States. This warranty does not cover units sold to rental firms, military operations, hotels, schools, hospitals or for other commercial, industrial, or institutional applications. These uses are covered only by such specific warranty as Canon may issue with such sales. This Limited Warranty does not apply to accessories or consumables for the Equipment, which are sold "AS IS", without warranty of any kind by Canon USA. Please retain this warranty card and your Bill of Sale as a permanent record of your purchase. This card is most important in order to be sure you are contacted right away should there be a safety inspection, modification or product recall under applicable laws or regulations. Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store This allows for uninterrupted recording of your special events and keeps your batteries ready to go. Now, its easier than ever to transfer and backup footage from your camcorder onto DVDs with the Canon DW100 DVD Burner. Created to provide data backup for Canon Hard Disk Drive and

Flash Memory camcorders, the DW100 allows you to connect to a compatible Canon camcorder to download video and burn AVCHD or Standard Definition DVDs.

The DW100 will also play back the AVCHD discs created in the burner on an HDTV monitor through your VIXIA High Definition Flash or Hard Disk Drive camcorder. Now, its easier than ever to transfer and backup footage from your camcorder onto DVDs with the Canon DW100 DVD Burner. The DW100 will also play back the AVCHD discs created in the burner on an HDTV monitor through your VIXIA High Definition Flash or Hard Disk Drive camcorder. It has everything you need to get started! This case can be conveniently carried by hand or via the comfortable shoulder strap, providing convenient handsfree protection. It is ideal for controlling various camcorder functions when used on a tripod. Offering a magnification factor of 1.5X, this converter provides an extended telephoto range, allowing distance subjects to be captured with brilliant clarity. Using the Canon VL5 Video Light on the VIXIA HF10 and VIXIA HF100 camcorders requires a firmware update. No additional power or wires are needed for its operation. With a CarePAK PLUS, a damaged product will be repaired to good working condition or replaced with an equivalent product. With a CarePAK PLUS, a damaged product will be repaired to good working condition or replaced with an equivalent product. Providing a magnification factor of 0.7X, this converter offers an extended wide angle view. It is ideal for capturing landscapes, family group shots, and stage presentations. Enhancing your movie making abilities would be the cameras 24p Cinema Mode and the 30p Progressive Mode. Colors and exposure will have a richer filmlook that will give your video more visual punch and depth. Other ways in which Canon gave the HF S11 more versatility include the ability to add external microphones and lights using the mini Advanced Accessory Shoe and the option to use headphones to monitor audio while recording or upon playback.

If youre looking for a camcorder that provides you with HD recording, generous storage options, the ability to add external lights and mics, and a bevy of other useful functions, the HF S11 has it all and more. In addition to recording full 1920 x 1080 high definition AVCHD video with a bit rate of 24Mbps, the camcorder also takes 8MP digital stills and offers a wide variety of shooting functions and features, including Dual Shot, Face Detection, and a builtin flash. Video recorded to the internal flash drive can also be copied onto a memory card which can then be inserted into your computer or HDTVs card reader slot for immediate viewing. You can also use higher capacity memory cards to further increase the video storage of your VIXIA HF S11 1920 x 1080 Full HD Recording The Canon VIXIA HF S11 not only captures images in Full HD, but records and outputs at 1920 x 1080 as well, so you get Full HD from lens to screen. Your memories are preserved in stunning clarity, and ready for playback on your HDTV. The VIXIA HF S11s powerful CMOS image sensor provides high color resolution and advanced color reproduction for brilliant results. It is also unique in featuring Canons proprietary noise reduction technologies for crisp, sharp images Genuine Canon 10x HD Video Lens The VIXIA HF S11 comes with a Genuine Canon 10x HD Video Lens. The lens features four zoom speeds three preset and one variable for smooth, steady zoom shots. The HD Video Lens also has a Super Spectra Coating that reduces flare and ghosting. Its aspheric design also reduces aberration and increases resolution, while a gradation neutral density system provides better exposures in bright shooting situations. In addition, a builtin 1.7x Digital Teleconverter provides an extended telephoto range.

It also has 10x optical zoom and 200x digital zoom DIGIC DV III Image Processor DIGIC DV III helps to deliver enhanced image quality, true color production for both video and photos, and a noise reduction system for low light performance. It is also the highspeed engine which powers a variety of Canon technologies including 8.0 Megapixel photo capture, Canon Face Detection, Advanced Auto Exposure and Simultaneous Photo Recording. Plus, the Canon DIGIC DV III Image Processor allows continuous shooting of digital photos with the VIXIA HF S11. You can also enjoy faster processing of your images to your memory card 1.4x normal card; 2.5x HiSpeed card. In addition, it helps lower

power consumption for longer battery life You'll see enhanced detail, finer gradations of tones and improved reproduction of moving subjects Dynamic SuperRange Optical Image Stabilization Dynamic SuperRange Optical Image Stabilization provides continuous adjustment throughout the entire zoom range to correct for a broader range of motion. In comparison to SuperRange Optical Image Stabilization, extra compensation is applied at wideangle focal lengths to eliminate unwanted shaking common when walking. Canons Dynamic SuperRange OIS corrects a variety of camcorder motions the fast vibration you'd experience while recording from a moving car; the medium-speed motion of handheld recording; and the slower motion of body sway. In addition, optical image stabilization keeps your shot steady without a loss in image quality something that can't be said for electronic image stabilization. And image stabilization isn't just for video; you can even use it for taking sharper, clearer digital photographs with your VIXIA HF S11 The Instant AF feature uses an external sensor, in combination with Canons auto focus system, to help significantly decrease the time it takes to find focus, even in low light conditions. With Instant AF, it's possible to capture fast, accurate focusing, even when following a moving subject.

And because a properly focused subject is more critical than ever with HD, the VIXIA HF S11 also features Focus Assist. This helps in capturing your subject in razor-sharp focus. It works by providing a 2x magnification of your subject when you start recording, this assistance is automatically cancelled Of the faces tracked, 9 detection frames can be displayed at one time. The system will also recognize faces that are turned downwards or sideways. In addition, a specific face may be selected as the main subject for continuous tracking. This feature can be used to search for clips featuring that specific subjects face. In search and playback, use of the Face Index will display frames with the chosen face as a thumbnail in each shot in which it appears. The selected face can be linked as a timeline to further identify footage containing that subject This enhanced Auto Exposure system, together with Face Detection and DIGIC DV III, captures an expanded dynamic range, optimizing brightness to avoid overexposure, while still preserving important shadow detail. In addition, you can use the VIXIA HF S11's Cinema setting, which changes the color and tonal characteristics, evoking the look and feel of a movie shown in a theater. For added flexibility, these settings can be used together or independently In addition, this setting gives enhanced quality to still images captured after recording. It's also excellent for action shots and sports The VIXIA HF S11 features Simultaneous Photo Shooting, allowing you to capture 6 Megapixel photos and video at the same time. The built-in digital camera also features Auto Intelligent Auto Focus AiAF, auto exposure modes, Program AE Mode, selectable metering patterns, and auto exposure bracketing. In addition, the digital camera also features continuous shooting and simultaneous photo recording while you're capturing video. The HF S11 features Dual Shot mode which allows for capturing video and stills simultaneously.

The camera also features shooting assist functions such as gain control, 100% area display, and Custom Key. Using a hard coat Anti-Reflection surface and improved color reproduction, the scene in the viewfinder is a more accurate indication of what you're capturing in the camcorder. An added benefit of this Canon exclusive is the wider range of viewing angles possible with this new LCD screen. With less glare and deeper contrasts, groups of people can gather around it and see the image displayed clearly Advanced Video Snapshot Mode Advanced Video Snapshot Mode will let you shoot short movie clips with the VIXIA HF S11 in the same way you've shot snapshots with your still camera. In this mode, you can create 4 second video clips which can be played back in the VIXIA HF S11 with background music. Simply slip the RAV1 into the Mini Advanced Accessory Shoe on top of the VIXIA HF S11 and you'll have a LANC terminal to which you can connect an optional wired remote controller, such as the Canon ZR1000, ZR2000 or third-party device Only a single cable connects your camcorder to your TV for the highest quality playback video and audio Microphone Terminal with Manual Audio Level Control The VIXIA HF S11 allows you to enhance the quality of your audio by using the optional accessory Canon DM100 Directional Stereo Microphone which

attaches to the Mini Advanced Accessory Shoe to capture better sound, and headphones to monitor the audio as you hear it. You can also attach an external microphone through the 3.5mm microphone terminal. Manual control of audio levels also lets you set the exact balance you need for the situation. Includes Pixela ImageMixer 3 SE Video Editing Software. The Canon VIXIA HF S11 High Definition Camcorder is bundled with a software suite called Pixela ImageMixer 3SE. You can easily perform a variety of functions, including AVCHD Editing in which you can trim, reorder, and combine scenes, as well as add music, titles, and transitions.

This software also allows you to play your AVCHD movies on your computer and will also let you share copies of your movie with friends and family through flash memory to hard drive copying. Turn your camcorder on and the lens cover automatically opens. Turn it off, and the cover closes. USB 2.0 HiSpeed Terminal The USB 2.0 HiSpeed Terminal provides for ultrafast transfer of movies and photos. Wireless Remote Control Wireless Remote Control lets you operate your VIXIA HF S11 from a distance, so you don't have to be left out of the picture. Compatible Optional Accessories Compatible Optional Accessories available including the Wide Converter WDH58, Tele Converter TLH58, Video Flash Light VFL2, Video Light VL5, Directional Microphone, DM100, Remote Control Adapter RAV1 and High Capacity Battery Pack BP827. Let us know YOUR RECENTLY VIEWED ITEMS Browsing History ON Clear History Not responsible for typographical or illustrative errors. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Canon Vixia Hf S11 Manual. To get started finding Canon Vixia Hf S11 Manual, you are right to find our website which has a comprehensive collection of manuals listed. Our library is the biggest of these that have literally hundreds of thousands of different products represented. I get my most wanted eBook Many thanks If there is a survey it only takes 5 minutes, try any survey which works for you. The iVIS HF S11 also features the DIGIC DV III image processor for a horizontal resolution equal to approximately 900 TV lines, as well as High Speed AF and Face Detection technology for highquality video recording. In addition, the HF S11 include a variety of features to accommodate shooting in an expanded range of scenes, such as a Night Scene Mode setting, which allows users to capture aesthetic nighttime scenery exactly as they see it with their own eyes.