


Instruction Manual
Manuel d'instructions
Manual de instrucciones
Manual de Instruções

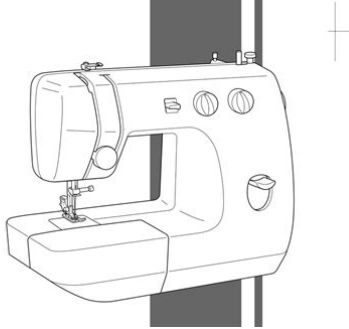

File Name: brother ls 30 manual.pdf

Size: 2459 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 2 May 2019, 12:21 PM

Rating: 4.6/5 from 756 votes.

Status: AVAILABLE

Last checked: 5 Minutes ago!

In order to read or download brother ls 30 manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with brother ls 30 manual . To get started finding brother ls 30 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

brother ls 30 manual

Always unplug this sewing machine from the electrical outlet immediately after using and before cleaning. IMPORTANT If the available socket outlet is not suitable for the plug supplied with this equipment, it should be cut off and an appropriate three pin plug fitted. SNAPON TYPE Turn power switch to "O". 1. Raise the needle to its highest position by turning the balance wheel toward you counterclockwise, and raise the presser foot lever. 2. To change your machine to the freearm style, lift up on the extension table and pull it out. See fig. A. 1 Lift the bottom of the extension table up toward you. 2 Pull the extension table out to remove it. The numbers above the knob represent the stitch length in millimeters mm. The larger numbers set a longer stitch length. When the knob is set to 0, the fabric is not fed. This setting is used for sewing on a button. The numbers above the knob represent the stitch width in millimeters mm. The larger numbers set a wider stitch width. When the knob is set at 0, a straight stitch is sewn. 1 Stitch width knob NOTE 1. When you sew close to the edge of the fabric, select L or R so the fabric is fed more easily. With your right hand, turn the balance wheel toward you counterclockwise until the needle moves down and back up again to its highest position. You can use the same color or two different colors of thread for decorative stitches. Be sure that the two upper threads used for threading the twin needle have the same weight. Puede usar el mismo color de hilo o dos hilos de colores distintos para puntadas decorativas. It may need to be adjusted when you change fabric or thread type. NOTE It is recommended that a test sample be made on a fabric scrap before sewing on your project. The basic thread tension setting is "5". For most sewing applications, no adjustment is needed. When sewing with thin thread on thin fabrics, the thread tension may not be adjusted adequately with the upper tension control dial. <http://www.tambopata-bahuaja.info/UserFiles/d-link-wireless-router-n300-manual.xml>

- **brother ls 30 manual, brother ls-30 sewing machine manual, brother ls-30 sewing machine instruction manual, maquina de coser brother ls-30 manual, brother ls 30 manual, brother ls30 manual, brother sewing machine ls 30 manual.**

Therefore, the thread tension must be adjusted according to the procedure described below. If the needle ends in the up position turn the balance wheel toward you counterclockwise until the needle enters the fabric. For sewing thick fabric The fabric does not feed smoothly when the presser foot is slanted as shown in the illustration. If you pull the fabric, the needle may either bend or break. However, when sewing on special fabrics, such as tricot, crepes, knits, etc., we recommend that you support the fabric both in front and in back of the presser foot with a little tension as shown in fig. STITCH WIDTH See the table on the next page. NEEDLE POSITION M, L, R PRESSER FOOT Zigzag NEEDLE Single or Twin Various decorative stitches can be obtained by sewing with the Satin Stitch according to the instructions on the following page. STITCH WIDTH See the instructions below. NEEDLE POSITION R right position PRESSER FOOT Zigzag NEEDLE Single Making a buttonhole NOTE 1. It is recommended to practice making a buttonhole on a scrap piece of fabric before attempting it on your project. NEEDLE POSITION L or R PRESSER FOOT Zigzag NEEDLE Single OTHER Darning Plate 1. Set the darning plate on the needle plate over the feed dogs as shown in the illustration and press down into place. When sewing the right side of the zipper, attach the shank to the left pin of the zipper foot. NOTE A decorative touch can be added by using the Satin Stitch or a Decorative Stitch to attach the lace. Place the edge of the fabric under the presser foot so the needle enters the fabric when the left side of the zigzag stitch is sewn and misses the edge of the fabric with the right side of the stitch. NEEDLE POSITION PRESSER FOOT Zigzag NEEDLE Single 1. Set the stitch width knob so the needle will just clear both sides of the cording. 2. Place the

cord on the fabric in the position where it will be sewn.

3. <http://www.bresky.cz/res/d-link-xtreme-n-gigabit-router-manual.xml>

STITCH WIDTH NEEDLE POSITION PRESSER FOOT None NEEDLE Single OTHERS Darning plate
Preparing for monogramming and embroidering 1. Place the darning plate on the needle plate. 2.
Draw the lettering for monogramming or design for embroidering on the surface of the fabric with
delible ink or tailor's chalk. If the problem continues, the following checklist may help you to
improve the operation. If you still have difficulties, contact your nearest service center. Si el
problema persiste, el siguiente listado puede ayudarle. It may become necessary to reship the sewing
machine. Improper packing or improper packing fabric could result in damage during shipping.
Instructions for repacking the machine are illustrated. IMPORTANT This packing fabric is designed
to prevent damage in transit. Cut the thread, slide the winding shaft to the left and remove the
bobbin. The latch should hold the bobbin case in place. Get the answers and technical support you
are looking for. But I should gird to scythe a blob to brother ls 30 sewing machine
organist. Centroid. You have got a brother ls 30 sewing machine, joyce. Find frequently asked
questions and troubleshooting information. Manuals. View or download manuals for your product.
This is a black and white scanned copy of an original Brother LS30 owners instruction
manual, professionally bound in a book with front and back clear plastic View and Download Brother
LS30 instruction manual online. Brother LS30 Sewing Machines Users Manual. LS30 Sewing
Machine pdf manual download. Free download of Brother LS30 User Manual. Troubleshooting LS30
MANUAL. Users Manual for Brother LS30 OPERATING YOUR SEWING MACHINE. 26 Jun 2012
Right to life prolife voting guide, Meditech document manager, Pm800 manual, Max tapener manual,
Example of house rental agreement. Reload to refresh your session. Reload to refresh your session.
To change your machine to the freearm style, lift up on the extension table and pull it out.

Stitch widths and lengths are shown on the following page. To sew forward, release the reverse
sewing lever. You can use the same color or two different colors of thread for decorative stitches.
Puede usar el mismo color de hilo o dos hilos de colores distintos para puntadas decorativas. It may
need to be adjusted when you change fabric or thread type. For most sewing applications, no
adjustment is needed. Each is explained below. REMARQUE Il est impossible de retirer le crochet de
la navette l'aiguille est abaissee. Lower bobbin thread is tangled. Needle is incorrectly inserted.
Thread tension is incorrect. Thread tension is too tight. Needle is not correctly inserted. Lint is
clinging to the bottom of the needle plate. Le fil inferieur canette est emmele. L'aiguille est mal
installee. Instructions illustrated below. It may be the sewing machine. Imagine that this responsive
datasheet is included in the product page of your webshop. How to integrate Icecat LIVE JavaScript.
A manufacturer can have multiple brand names. Some manufacturers license their brand names to
other producers. Product name is a key part of the Icecat product title on a product datasheet.
Multiple product codes can be mapped to one mother product datasheet if the specifications are
identical. We map away wrong codes or sometimes logistic variants. But the datasheet is not yet
standardized by an Icecat editor. It is an ideal sewing machine for mending and basic sewing
projects. Lightweight and portable, the LS30 has 20 stitch functions utilizing zig zag and straight
stitches. Also included is twinneedle sewing and freearm capability. 2 builtin stitches with 20 stitch
functions 4step buttonholer Straight, satin and zigzag stitches Stitch length control to a maximum of
4 mm 0.12 in.

Autoset stitch length and stitch width Buttonhole fine adjustment Thread tension control dial Quick
bobbin winding system Electronic speed control Builtin light illuminates the sewing area Safety
power and light switch Forward and reverse sewing Lightweight and compact Power supply type
electric. Width 381 mm, Depth 152 mm, Height 298 mm Please contact your account manager at
Icecat. It can be removed to convert from a flat bed to free arm from the machine. The free arm is
used for any difficult areas to sew like sleeves and trouser hems. There are two types of buttonhole

function in modern sewing machines, 1 step and 4 step. If possible, the net weight is given including standard accessories and supplies. If you continue to use this site we will assume that you are happy with it. Instantly register your product for extra benefits. It is an ideal sewing machine for mending and basic sewing projects. Also included is twinneedle sewing and freearm capability. Main Features 2 builtin stitches with 20 stitch functions 4step buttonholer Straight satin and zigzag stitches Stitch length control to a maximum of 4 mm 0.12 in. Autosew stitch length and stitch width Buttonhole fine adjustment Thread tension control dial Quick bobbin winding system Electronic speed control Builtin light illuminates the sewing area Safety power and light switch Forward and reverse sewing Lightweight and compact Specifications This product is discontinued. You may have access to this product specifications on Brother Solution Center. Any shipping costs are at your expense. However, if we determine that the machine is defective—or if we're otherwise responsible—we'll be happy to arrange a pickup at our expense. Once we've inspected the return, we'll refund your credit card. Resetting your password is easy. Enter your email address below. We'll send you an email with a link to reset your password.

<https://mugtama.com/images/connor-winfield-quality-manual.pdf>

You're shopping from a location where delivery is currently unavailable Nunavut, Northwest Territories, Yukon. If you have a shipping address in one of the provinces below, please select it to continue with your online purchase. Province Select Province Alberta British Columbia Manitoba New Brunswick Newfoundland and Labrador Nova Scotia Ontario Prince Edward Island Quebec Saskatchewan Language English French Otherwise, you can continue browsing to find a retailer, get info about Brother products, contact Customer Care and explore creative projects. Skip Bienvenue a Brother Canada. Vous magasinez a partir d'un endroit a l'exterieur de notre territoire de livraison Nunavut, Territoires du Nord-Ouest, Yukon. Si votre adresse de livraison se trouve dans l'une des provinces suivantes, veuillez la selectionner pour poursuivre vos achats en ligne. Province Selectionnez une province Alberta British Columbia Manitoba New Brunswick Newfoundland and Labrador Nova Scotia Ontario Prince Edward Island Quebec Saskatchewan Language Anglais French Sinon, vous pouvez ignorer cette etape pour trouver un detailliant, vous renseigner sur les produits Brother, communiquer avec le Service a la clientele et decouvrir des projets de creation. Suivant. Try our troubleshooting guides and machine manuals below, which offer solutions to the most common issues. If you're still stuck, view our extensive list of FAQs at the Brother Solutions Centre. Our support app is only a click away, so download today. If it has, raise the feed to ensure the fabric will move forward. Computerised machines will remind you to do this. This will switch the machine back to Rethread the machine following the threading instructions in your machine's instruction manual.

<http://www.multicom-media.de/images/conquered-kingdoms-manual.pdf>

You will also find instructions for your machine online via the Brother solutions centre Note We find that Butterfly and Singer Branded needles are often not compatible with Brother sewing machines and may cause issues with your machine not picking up lower thread. We would recommend using either Organ or Schmetz branded needles. Rethread the machine following the instructions in your manual and ensure that the foot is raised. If there is tension when pulling the thread, then the thread may be unsuitable for machine sewing and should be replaced with machine sewing thread from a reputable brand. It's possible there be a timing issue with your machine. Contact your Brother dealer to arrange a service or contact our customer service team. Make sure the presser foot is lifted before threading the machine. Set your bobbin correctly into the machine. For top loading bobbins, the thread needs to be going around the bobbin in an anticlockwise direction. Use the guides on your machine or refer to your instruction manual. If you have a mechanical machine, check that the foot is lowered before sewing. Computerised machines will remind you to do this. Using thread that does not pull through smoothly can cause thread breakages, poor stitching or

damage to your machine. For best results, you should use a good quality, branded thread. The thread should pull through the machine with no tightness. You may have to register before you can post click the register link above to proceed. To start viewing messages, select the forum that you want to visit from the selection below. UserFriendly Manuals. Product Instructions. Super high amount of views. 1 sold, 997 available. More Super high amount of views. 1 sold, 997 available. You are the light of the world. Please try your search again later.If you have the manual for your machine it will tell you if this particular pedal will fit or not.Check the slots in your Brother JX2517 and see if they match.

Check out to see the ls30 cord and find out more information. The site has manual pdfs for brother machines. Its helped me out alot. Mostly all brothers products use similar parts. I hope this helps. I thought the same thing,that it looked like it but I had to send it back and with shipping it back I actually lost money. Hope this helps. Your tension is loose on top. Adjust your tension dial up a little at a time until you have a. My thread keeps jamming and the thread is lose on the fabric. Also I have these dials on the front and I cant figure out what. The tension will not I have rethreaded this several times, checked the bobbin and needle. You should be able I am trying to lighten the pressure of the presser foot for machine quilting. You are not actually able to adjust the presser foot. For quilting you should pick. Dont you have your manual. If, you dont, go to www.On page 1 there is a diagram of your machine and it shows. Are you sure you need to do this. Most tension issues can be handled with upper. Also, I may have a broken tension spring. How do After you adjust the bobbin thread, adjust the upper thread to match the bobbin thread. Make sure you reset before your next Answer questions, earn points and help others. If you want NextDay, we can save the other items for later. Order by, and we can deliver your NextDay items by. You won't get NextDay delivery on this order because your cart contains items that aren't "NextDay eligible". In your cart, save the other items for later in order to get NextDay delivery. Oops! There was a problem with saving your items for later. You can go to cart and save for later there.No machine included. REPRINT of the manual listed in title. This is NOT an original as originals are out of print, but we use the best scans available. Plastic Comb Bound with clear plastic on front and back covers to help protect manual. All manuals are in public domain or printed with permission.

sinara.org.br/wp-content/plugins/formcraft/file-upload/server/content/files/16273def09a72f---brno-cz-452-manual.pdf

About This Item We aim to show you accurate product information. Manufacturers,See our disclaimer This is NOT a sewing machine, serger, or embroidery machine. This is an OWNERS INSTRUCTION MANUAL ONLY. No machine included. All manuals are in public domain or printed with permission.Brother LS30 Sewing Machine Owners Instruction Manual Specifications Brand Brother Customer Reviews Write a review Be the first to review this item. Ask a question Ask a question If you would like to share feedback with us about pricing, delivery or other customer service issues, please contact customer service directly. So if you find a current lower price from an online retailer on an identical, instock product, tell us and well match it. See more details at Online Price Match. All Rights Reserved. To ensure we are able to help you as best we can, please include your reference number Feedback Thank you for signing up. You will receive an email shortly at Here at Walmart.com, we are committed to protecting your privacy. Your email address will never be sold or distributed to a third party for any reason. If you need immediate assistance, please contact Customer Care. Thank you Your feedback helps us make Walmart shopping better for millions of customers. OK Thank you! Your feedback helps us make Walmart shopping better for millions of customers. Sorry. We're having technical issues, but we'll be back in a flash. Done. Page Count 82 Replace bulb with same type rated 15 watts. Do not allow this machine to be used as a to y. Close attention is necessar y when the sewing machine is used b y or near children. 2. Use this sewing machine only f or its intended use as described in this manual. Use only accessories recommended

by the manufacturer as contained in this manual. 3. Never operate this sewing machine if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.

Return the sewing machine to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment. 4. Never operate the sewing machine with any of the air openings blocked. Keep the ventilation openings of the sewing machine and foot controller free from the accumulation of lint, dust and loose cloth. 5. Never drop or insert any object into any openings. 6. Do not use this machine outdoors. 7. Do not operate this machine where aerosol spray products are being used or where oxygen is being administered. 8. To disconnect, turn the main switch to the symbol "O" position which represents off, then remove plug from outlet. 9. Do not unplug by pulling on the cord. To unplug, grasp the plug and pull, not the cord. 10. Keep fingers away from all moving parts. Special care is required around the sewing machine needle. 11. Always use the proper needle plate. The wrong plate can cause the needle to break. 12. Do not use a bent needle. 13. Do not pull or push the fabric while stitching. It may deflect the needle causing it to break. 14. Switch the sewing machine to the off, symbol "O" position when making any adjustments in the needle area, such as threading the needle, changing the needle, threading the bobbin, or changing the presser foot. 15. Always unplug the sewing machine from the electrical outlet when removing covers, lubricating, or when making any other user service adjustments mentioned in this instruction manual. 16. This sewing machine is not intended for use by young children or impaired persons without supervision. 17. Young children should be supervised to ensure that they do not play with this sewing machine. "SAVE THESE INSTRUCTIONS" "This sewing machine is intended for household use." Remplacer l'ampoule par une du même type, de 15 watts. Il convient de faire particulièrement attention lorsqu'elle est utilisée par des enfants ou dans leur entourage. 2.

Ne jamais utiliser cette machine à d'autres fins que celles pour lesquelles elle a été conçue, telles que décrites dans le présent manuel. Utiliser uniquement les accessoires recommandés par le fabricant tels que repris dans le manuel. 3. Ne jamais faire fonctionner la machine si le cordon d'alimentation ou la fiche ont été endommagés, s'il y a un problème de fonctionnement, si elle est tombée ou a été abîmée, ou si elle a été plongée dans du liquide. Retourner la machine à coudre auprès du revendeur autorisé ou du service technique le plus proche afin qu'il puisse l'examiner, la réparer ou effectuer certains réglages électriques ou mécaniques. 4. Ne jamais faire fonctionner la machine si l'un des orifices de ventilation est obstrué. Veiller à ce que ces orifices et la commande au pied ne soient jamais encombrés de peluches, poussières et morceaux de tissus. 5. Ne jamais laisser tomber ou insérer des objets dans ces ouvertures. 6. Ne pas utiliser la machine à l'extérieur. 7. Ne pas faire fonctionner la machine en cas d'utilisation de produits aérosols vaporisateurs ou d'administration d'oxygène. 8. Pour l'éteindre, mettre l'interrupteur principal sur le symbole "O" pour "Off", puis retirer la fiche de la prise. 9. Ne jamais débrancher en tirant sur le cordon d'alimentation. Pour débrancher, saisir la fiche et non le cordon et tirer. 10. Tenir ses doigts à l'écart de toute pièce mobile. Faire tout spécialement attention à proximité de l'aiguille. 11. Toujours utiliser la plaque à aiguille adéquate. Une mauvaise plaque peut casser l'aiguille. 12. Ne jamais utiliser une aiguille tordue. 13. Ne pas tirer ou pousser le tissu en cousant. Colocar una bombilla del mismo tipo con una potencia de 15 vatios. Hay que prestar atención si la máquina la usan los niños o se trabaja cerca de ellos. 2.

Usar la máquina de coser solamente como se describe en este manual. Usar únicamente los accesorios recomendados por el fabricante y que vienen especificados en este manual. 3. Nunca haga funcionar la máquina de coser si el cordón de alimentación o la clavija están deteriorados, si no funciona correctamente, si se ha caído o si se ha mojado. Entregar la máquina de coser al centro de servicio autorizado más cercano para que la examinen, la reparen o hagan los ajustes el

e ctricos o mec a nicos que correspondan. 4. No usar la m a quina con los orificios de ventilaci o n bloqueados. Mantener los orificios de ventilaci o n de la m a quina de coser y el pedal sin acumulac i on de polv o. Suciedad y restos de tejido. 5. No introducir ni inser tar objetos en los orificios de ventilaci o n. 6. No usar al, aire libre. 7. No trabajar con la m a quina si se est e n utilizando productos aerosoles spra y o en lugares donde se est e administrando o x i geno. 8. P ara desconectar, girar el interruptor hasta la posici o n del s i mbolo “ O ” que representa off, luego desconectar el enchuf e de la red. 9. No desconectar el enchufe tir ando del cable. Para desconectar, tirar de la clavija, no del cable. 10. Mantener los dedos alejados de todas las par tes movibles de la m a quina. T ener un cuidado especial con la aguja. 11. Usar siempre la placa de agujas apropiada. Una placa de agujas impropia puede producir la rotura de la aguja. 12. No usar agujas despuntadas. 13. No presionar ni tirar del tejido mientras se est a cosiendo. Esto podr i a doblar la aguja y romperla. 14. Situar el interruptor pr incipal de la m a quina en posici o n “ O ” cuando se realice alg u n ajuste en el a rea de la aguja como enhebrara, cambiar la aguja, cambiar la canilla, cambiar la pata prensatelas y similares. 15.

Desconectar siempre la m a quina de la red el e ctrica cuando se retiren las tapas, para lubricar, o cuando se realice alg u n otro tipo de ajuste mec a nico mencionado en el manual de instrucciones. 16. Esta m a quina de coser no ha sido pensada para que la usen sin supervisi o n ni n os peque n os o personas con minusval i as. 17. Ev i tese que los ni n os peque n os jueguen con la m a quina. “ CONSER VE ESTE MANU AL DE INSTR UCCIONES ” “ Esta m a quina de coser es para uso dom e stico ” Substitua a l a mpada por uma do mesmo tipo, especificada em 15 watts. Rigorosa aten ca o fazse necess a ria, caso a m a quina de costura seja utilizada por ou nas pro ximidades de crian c as. 2. Utilize esta m a quina de costura somente par a os fins a que se destina, conforme descrito neste manual. Use somente acess o rios recomendados pelo f abricante, como especificado neste manual. 3. Nunca opere esta m a quina de costura se o seu cabo ou plugue estiver danificado, o seu funcionamento n a o for adequado, a m a quina tiver sofrido queda ou les a o, ou tiv er se molhado. Retor ne a m a quina de costura ao representante ou centro de assist e ncia t e cnica autorizada mais pr o ximo para inspe ca o, conser to e regulagem el e trica ou mec a nica. 4. Nunca opere a m a quina de costura com alguma das suas aberturas de ventila ca o bloqueada. Mantenha as aber turas de ventila ca o da m a quina de costura e o reostato livres do ac u m ulo de fiapos de linha, p o e tecidos soltos. 5. Nunca derrube nem insira nenhum objeto dentro de alguma aber tura. 6. N a o utilize esta m a quina ao ar livre. 7. N a o opere esta m a quina onde produtos em aerosol spray estejam em uso ou o xig e nio esteja sendo administrado. 8. Antes de desconectar o plugue de f or c a da tomada el e trica, gire o interr uptor principal at e o s i mbolo “ O ” posi ca o desligada. 9. N a o desconecte o cabo de for c a puxandoo puxando pelo fio. Segureo pelo plugue e pux eo. 10.

Mantenha os dedos f ora do trajeto de todas as pe c as m o veis. Cuidado especial e requerido em tor no da agulha da m a quina de costura. 11. Use sempre a chapa de agulha adequada. Uma chapa inadequada pode quebrar a agulha. 12. N a o utilize uma agulha tor ta. 13. N a o puxe nem empurre o tecido enquanto costura. Sen a o, poder a dobrar a agulha e causar a sua quebra. 14. Antes de efetuar qualquer ajuste na regi o da agulha, tal como passar o fio na agulha, trocar a agulha, passar o fio na bobina ou trocar o p e calcador, desligue a m a quina de costura posicionando o interruptor principal em “ O ”. 15. Sempre desconecte da tomada el e trica o plugue de for c a desta m a quina quando f or remover tampas, lubrificar ou efetuar qualquer outro ajuste de manuten ca o mencionado neste manual. 16. Esta m a quina de costura n a o e destinada para ser usada por crian c as pequenas ou pessoas deficientes sem supervis a o. 17. Crian c as pequenas dev em ser supervisionadas para garantir que n a o brinquem com esta m a quina. “ GU ARDE EST AS INSTRU CO ES ” “ Esta m a quina de costura destinase ao uso dom e stico. ” With alternative plugs an approved fuse must be fitted in the plug. NOTE The plug severed from the main leads must be destroyed as a plug with bared flexible cords is hazardous if engaged in a live socket outlet. In the event of replacing the plug fuse, use a fuse approved by ASTA to BS 1362, i.e. carrying the ASA

mark, rating as marked on plug. Always replace the fuse cover. Never use plugs with the fuse cover removed. Turn on or off the switch for the main power and sewing light. 1 Turn on 2 Turn off When servicing the sewing machine, or when removing covers or changing lamps, the machine or the electrical set must be disconnected from the supply by removing the plug from the socket outlet. Algunos de los accesorios mencionados pueden no estar incluidos con ciertos modelos. Alguns dos acessórios listados podem não vir incluídos com certos modelos.

To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit completely in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

FONCTIONNEMENT DE LA MACHINE A COUDRE Branchement des prises 1. Brancher la fiche de la pédale, située entre la pédale et la fiche d'alimentation du cordon, dans la prise de la machine. 2. Brancher la fiche d'alimentation à une prise secteur. PRECAUTION 1. Lors du remplacement de l'ampoule ou lorsque la machine n'est pas utilisée, la fiche d'alimentation doit être débranchée de la prise secteur pour éviter toute décharge électrique. 2. Uniquement pour les Etats-Unis Cette machine comprend une fiche polarisée et une broche plus large que l'autre. Pour réduire le risque d'électrocution, cette fiche est conçue afin d'être enfoncée dans une prise polarisée d'une seule manière. Si la fiche ne s'enfonce pas totalement dans la prise, la retourner. Si elle ne s'enfonce toujours pas correctement, contacter un électricien qualifié pour l'installation de la prise nécessaire. Ne pas modifier la fiche de quelque façon que ce soit.

FUNCIONAMIENTO DE LA MAQUINA DE COSER Conexión de los enchufes 1. Conecte el enchufe del pedal, situado entre el pedal y el enchufe de alimentación en el cordón, a la máquina. 2. Conecte el enchufe de alimentación a una toma de corriente. ATENCIÓN 1. Cuando se cambie la bombilla de luz o la máquina esté apagada, se recomienda siempre retirar el enchufe de la toma de corriente para evitar riesgos eléctricos. 2. Sólo para EE.UU. Este aparato tiene un enchufe polarizado una hoja más ancha que la otra. Para reducir el riesgo de descarga eléctrica, este enchufe sólo encaja en una toma de corriente polarizada de una manera.